


Hazard and Risk Assessment Guide for MegaDumper bin-tipping machines

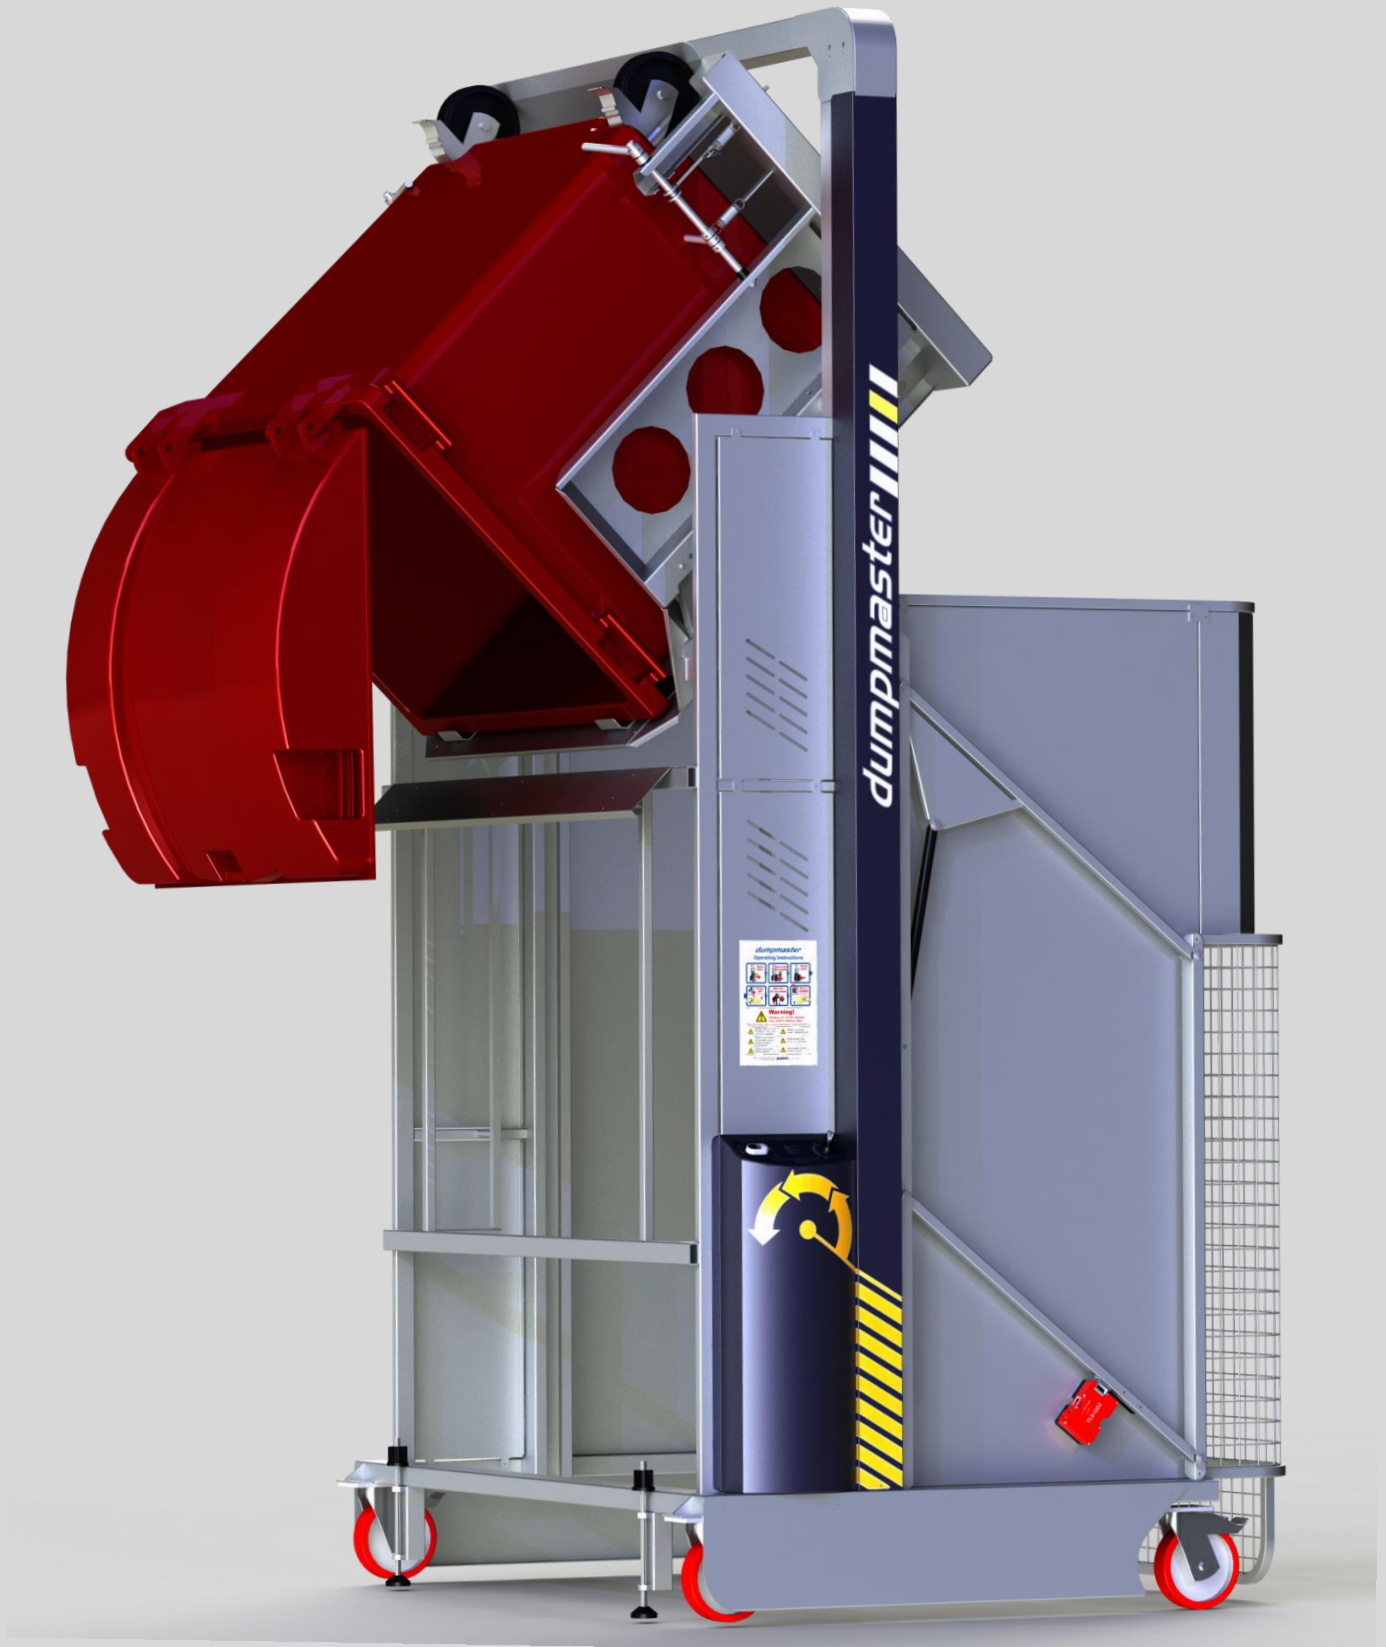

This document is intended to assist potential customers to determine the level of guarding required in order to meet their obligations under Workplace Health & Safety regulations.

Note that this does not remove the customer’s obligation to conduct his own Risk Assessment and put procedures in place to eliminate, isolate, or minimize any residual risks.

Sometimes an assessment may show that a Cat3 level is recommended, but the cost is prohibitive. In this case, the customer must ensure adequate procedures are put in place to ensure the safety of all operators and other persons in the vicinity of the machine.

Operator safety for *MegaDumper* bin-tipping machines is one of the key design elements, and as a consequence they are inherently very safe machines, *by design*. However, as with all powered mechanical and hydraulic equipment, some hazards and risks cannot be entirely eliminated.

To ensure the Risk Assessment is absolutely comprehensive, Simpro ignores the standard guarding during the initial assessment. Almost all common hazards are eliminated by the standard guarding; however, it is necessary to demonstrate this. Potential hazards that have been identified include:

- I. Jamming or amputation of fingers or limbs in moving parts
- II. Crushing if the cradle was to come down or fall on a person
- III. Operator or others being hit by falling or flying debris
- IV. Crushing if the machine falls over
- V. Electrocutation or electric shock

With reference to the Assessment table and Legend below:

- All hazards above are classified as ‘Serious’ (S2)
- The Frequency classification may be either F1 or F2, depending on the specific application. As the cycle time is very short (typically under 15 seconds) up to 5 cycles per hour could be classified as F1.
- All hazards are avoidable and can be classified as P1.

LEGEND

S SEVERITY OF INJURY

S1= Slight

S2= Serious (normally irreversible) injury, including death

F FREQUENCY AND/OR DURATION OF EXPOSURE TO THE HAZARD

F1= Seldom to quite often, and/or short exposure time

F2= Frequent to continuous and/or long exposure time

P POSSIBILITY OF AVOIDING THE HAZARD

P1= Possible under specific conditions

P2= Nearly impossible

Selection of categories B, 1 to 4


● = Preferred categories for reference points

● = Possible categories which may require additional measures

○ = Measures which can be over-dimensioned for the relevant risk

Category Assessment Table

Starting point for risk estimation for the safety-related part of the control system

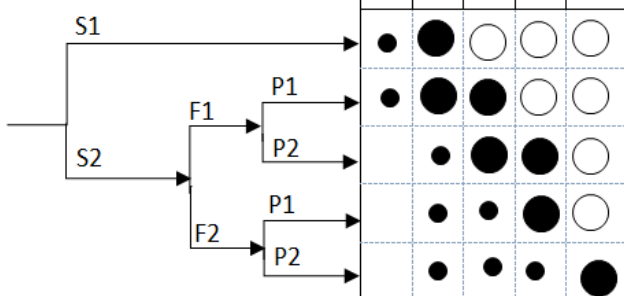

		Category				
		B	1	2	3	4
Starting point for risk estimation for the safety-related part of the control system	S1	●	●	○	○	○
	F1	P1	●	●	○	○
		P2	●	●	○	○
	F2	P1	●	●	●	○
P2		●	●	●	●	

It follows then that MegaDumpers tipping less than 5 bins per hour could be rated as Cat1 or Cat2, and those tipping more than 5 bins per hour could be rated as Cat3.

This is offered as a general guide only. Some companies have a policy that all new equipment be

In order to minimize the risk of harm to operators and other persons in the vicinity, MegaDumpers may incorporate various safety features as described below.

Items I to III above:

- MegaDumpers are fully guarded on both sides to at least 2.2m, and on the 'front' up to the 'tipping height'.
- A swing-up door is provided, which is fitted with a solenoid-operated lock, of 'power-to-open' type, and is only unlocked when the cradle is on the ground.

Further options:

- The electrical system may be monitored to a Category 3 or 4 safety level, and/or to Performance Level 'd' or 'e'.
- 1 or more proximity switches may be fitted so the machine cannot operate unless it is in position against the skip.
- A 'hood' may be provided on the tipping opening, to prevent access to moving parts through the front of the machine.
- An Operator Guard may be provided, which screens the operator from the hopper or skip, and makes it impossible for the operator to reach into the tipping opening while pressing the Raise or Lower buttons.
- The machine may be guarded to within 20mm of the floor on all sides, including around the castors and under the door, if required.
- An additional button may be fitted, requiring both hands to operate the machine.

Item IV above:

- MegaDumpers are very stable due to the fact that the centre of gravity always remains well within the footprint of the machine throughout the tipping cycle.

Option:

- Hooks may be fitted to hold the MegaDumper securely to the skip or hopper.

Item V above (Customer's responsibility):

- The power supply to all mobile equipment should always be fitted with an RCD.
- Power leads should be checked frequently to ensure they are in good condition. If any part of the lead is damaged, the entire lead should be replaced immediately.

A comprehensive list of specific potential faults and circumstances that could contribute to or result in a 'harm event' is given below, along with relevant Control methods.

Control methods shown in green apply if the machine is monitored to a Cat3 safety level.

General:

Risk Event: Use by unauthorized or untrained personnel.

Control Method: Only allow trained and authorized operators to use the machine.
Operators must read, understand, and obey the instructions provided with the machine.

Mechanical:

Risk Event: The operator could get a part of his body entangled in, crushed or cut by the moving cradle.

Control Method: This hazard is isolated by the guarding.
The door lock prevents persons from entering the area underneath the cradle while the cradle is moving or in a raised position.

Risk Event: One of the lifting chains could break.

Control Method: This hazard is isolated by the guarding.
The door lock prevents persons from entering the area underneath the cradle while the cradle is moving or in a raised position.

Risk Event: A bin could fall out of the cradle when inverted.

Control Method: The cradle is designed to hold the bin securely as soon as it is raised above ground level.

Risk Event: The machine could tip over when the bin is raised.

Control Method: The MegaDumper should only be used on flat, level ground.
If 'Skip hooks' are provided these should be engaged in the skip at all times.
If a 'Skip or hopper' proximity sensor is fitted the machine cannot be used unless it is in position.

Hydraulic:

Risk Event: The steel tubing could burst or leak, allowing the cradle to come down.

Control Method: This hazard is isolated by the guarding.
The door lock prevents persons from entering the area underneath the cradle while the cradle is moving or in a raised position.

Risk Event: The lifting ram could develop a leak, allowing the cradle to come down.

Control Method: This hazard is isolated by the guarding.
The door lock prevents persons from entering the area underneath the cradle while the cradle is moving or in a raised position.

Risk Event: The check valve could fail.

Control Method: This hazard is isolated by the guarding.
The door lock prevents persons from entering the area underneath the cradle while the cradle is moving or in a raised position.

Risk Event: The lowering valve could jam open or shut.

Control Method: If the valve jammed open the cradle would not be able to lift off the ground and no hazard would arise.
If the valve jammed shut the cradle would not be able to come down. This hazard is isolated by the guarding. The door lock prevents persons from entering the area underneath the cradle while the cradle is moving or in a raised position.

Electrical:

- Risk Event:** **The contacts on (one of) the motor contactor(s) could fuse or weld, so the motor does not stop when the Raise button is released.**
- Control Method:** Provision of an isolating switch either on the machine or nearby allows the power supply to be turned off quickly, stopping the motor.
The system will go into Safe mode and cannot be reset until the fault has been remedied. Pressing the E-Stop puts the machine into Safe mode and stops the motor running.
- Risk Event:** **A wire could come off the coil of (one of) the motor contactor(s), or a switching wire could come off, or a complete contact block could fall off the 'Raise' switch.**
- Control Method:** In all these situations the contactor will not operate, and the cradle cannot be raised. The machine cannot be used until the fault has been remedied.
- Risk Event:** **A wire could come off (one of) the contactor auxiliary contact(s).**
- Control Method:** **The system cannot be reset and the machine cannot be used until the fault has been remedied.**
- Risk Event:** **The contacts in the Raise switch could jam in the 'On' position**
- Control Method:** Provision of an isolating switch either on the machine or nearby allows the power supply to be turned off quickly, stopping the motor.
The machine cannot be used until the fault has been remedied.
Pressing the E-Stop isolates the signal to the contactor and stops the motor running.
- Risk Event:** **The contacts in the Lower switch could weld together or jam in the 'On' position**
- Control Method:** Provision of an isolating switch either on the machine or nearby allows the power supply to be turned off quickly, which will close the lowering valve.
The fault must be remedied before the machine can be used again.
Pressing the E-Stop isolates power to the lowering solenoid.
- Risk Event:** **A switching wire could come off, or a complete contact block could fall off a 'Lower' switch, or the plug could come off the solenoid, or the solenoid could come off the valve.**
- Control Method:** In all these situations the lowering valve will not operate, and the cradle cannot be lowered. The machine cannot be used until the fault has been remedied.
- Risk Event:** **Electrocution from the supply lead.**
- Control Method:** The power supply lead should have an RCD fitted. Power leads should come down from above where possible.
If not possible, leads should be as short as possible, and must be protected from damage by vehicles, heavy and/or sharp objects falling on them, and persons tripping on them.
Leads should be regularly checked and tagged by a registered electrician, and replaced if there are any signs of damage to the insulation.

Summary:

- MegaDumpers are inherently very safe machines due to their design and method of operation.
- Guarding prevents access to all moving parts during operation.
- Safety devices may be monitored to Cat3 level or higher as required.

Standard Operating Instructions

Read and understand the following instructions before attempting to use the machine.

Before use ensure that:

- All covers and safety guards are in place.
- The wheel brakes are applied (if fitted).
- All personnel other than the operator are well clear of the machine.

To empty bins:

- Open the door and wheel the bin onto the cradle, ensuring that it is properly positioned. Close the door.
- (Cat3/4 machines only) Press and hold the blue Reset button for approx. 1 second then release. The machine is ready for use if the light goes out. If the Reset light remains 'On' after holding down for 1 second, a fault may be indicated. The machine should be checked by a qualified person.
- Press the 'RAISE' (↑) button on the control panel, holding down until the bin reaches the inverted position, then release.
- When the contents of the bin have emptied, press the 'LOWER' (↓) button, holding until the cradle rests on the ground.
- Open the door and remove the bin.
- The bin may be stopped at any point of the cycle, by simply releasing the button.

Caution!

Keep feet and hands well clear of bin and cradle when operating.

- Never operate with any covers or guards removed.
- Never operate with a broken or damaged electrical supply lead.
- All persons other than the operator must stand clear of the machine while in operation.